

INSTALLATION GUIDE

Windshield Skin® installation guide for Super Stretch windshield protection, available in 6 mil, 8 mil, and 12 mil thicknesses. Each thickness is engineered to provide a different level of impact and abrasion protection while maintaining optical clarity and installation process. Please review all steps carefully before beginning installation to achieve the best possible outcome.



WINDSHIELD SKIN®
WORLD'S #1 WINDSHIELD PROTECTION

STEP 1: MAKE YOUR SLIP SOLUTION

You will need to provide the following items:

- 32 oz spray bottle
- Distilled water
- Baby Shampoo



In a 32 oz spray bottle, add 2 approx. tsp of baby shampoo. fill the bottle to the top with distilled water.

*Tip: the process is easier with 2 people, make 2 spray bottles for easiest installation!

STEP 2: KNOW YOUR TOOLS

The following items can be found in the included tool pack:

Squeegee



Trimming Blade



*note that Trimming Blade will not be included in Vehicle Specific Kits as they do not require any trimming

Mini Scraper




Scrub Pad



STEP 3: PREP THE WINDSHIELD

- Using the provided slip solution, spray and fully wet the entire windshield.
- With the Mini Scraper, remove any debris such as bug residue, bird droppings, or other contaminants.
- Squeegee the windshield dry, then respray with slip solution.
- Use the Scrub Pad to thoroughly scrub the entire windshield, paying close attention to the edges.
- Squeegee the windshield again to remove all remaining residue.

When using the Mini Scraper and Squeegee, follow the direction demonstrated to the right for optimal cleanliness.

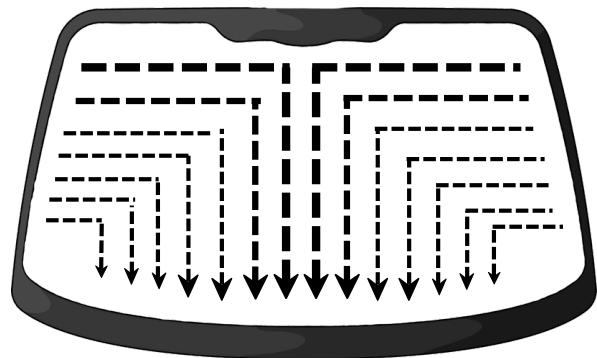

STEP 4: UNROLL THE MATERIAL LINER UP

Now that the windshield is fully prepped, lay out the Windshield Skin material and inspect it carefully for any imperfections or damage. If everything looks good, make sure the material is positioned liner-side up with the warning sticker facing up.

The warning sticker is attached to the adhesive protective liner, not the film itself. This liner will be removed and discarded during installation.



STEP 5: WET THE MATERIAL AND THE WINDSHIELD

Spray the entire windshield thoroughly with the slip solution. Next, begin peeling back the adhesive liner (the side with the sticker) and generously spray the adhesive side of the material as you peel. Discard liner once removed.

Water is your friend—this step is critical for a clean, smooth, and easy installation. Make sure there are no dry areas on either the windshield or the film.

STEP 6: FLIP THE MATERIAL ONTO THE WINDSHIELD

Once both the windshield and the material are thoroughly soaked with slip solution, carefully flip the material onto the windshield so the wet adhesive side meets the wet glass. This step is easiest with two people—one on each side of the vehicle.

Be sure to prevent the material from touching the wipers or edges of the vehicle, as this can contaminate the adhesive with dirt, hair, or debris. Avoid creasing or folding the material during placement.

If you are installing a Vehicle-Specific Kit, once the material is on the windshield, gently slide and adjust it until it is evenly centered on all four sides.



STEP 4: UNROLL THE MATERIAL LINER UP

Now that the windshield is fully prepped, lay out the Windshield Skin material and inspect it carefully for any imperfections or damage. If everything looks good, make sure the material is positioned liner-side up with the warning sticker facing up.

The warning sticker is attached to the adhesive protective liner, not the film itself. This liner will be removed and discarded during installation.



STEP 5: WET THE MATERIAL AND THE WINDSHIELD

Spray the entire windshield thoroughly with the slip solution. Next, begin peeling back the adhesive liner (the side with the sticker) and generously spray the adhesive side of the material as you peel. Discard liner once removed.

Water is your friend—this step is critical for a clean, smooth, and easy installation. Make sure there are no dry areas on either the windshield or the film.



STEP 6: FLIP THE MATERIAL ONTO THE WINDSHIELD

Once both the windshield and the material are thoroughly soaked with slip solution, carefully flip the material onto the windshield so the wet adhesive side meets the wet glass. This step is easiest with two people—one on each side of the vehicle.


Be sure to prevent the material from touching the wipers or edges of the vehicle, as this can contaminate the adhesive with dirt, hair, or debris. Avoid creasing or folding the material during placement.

If you are installing a Vehicle-Specific Kit, once the material is on the windshield, gently slide and adjust it until it is evenly centered on all four sides.




STEP 7: INSTALL


Squeegee from the center outward—first up and down, then side to side—to divide the surface into four quadrants.

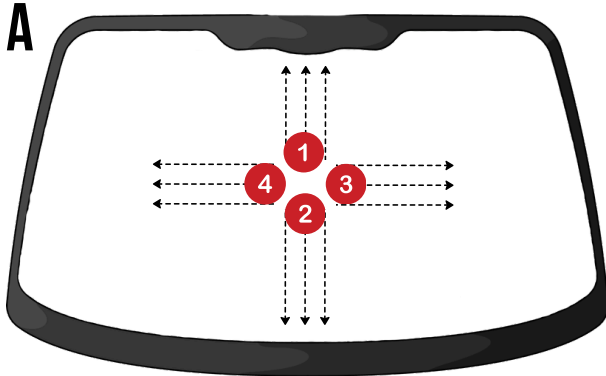


You now have the following 4 quadrants:

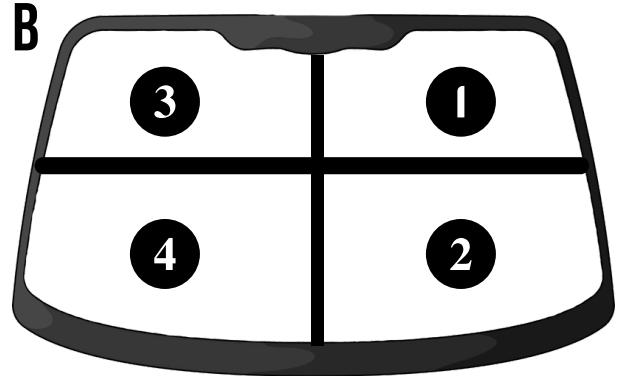


Squeegee horizontally from the middle all the way to the edge. once you reach the top, you can squeegee upwards to push the moisture up and out.

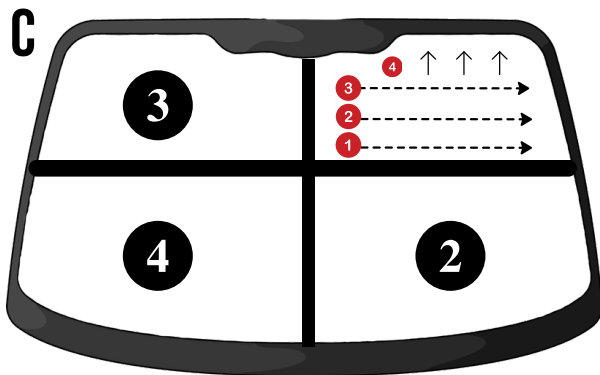


Follow a same pattern squeegeeing from the middle outwards, though now you can squeegee the moisture downwards:

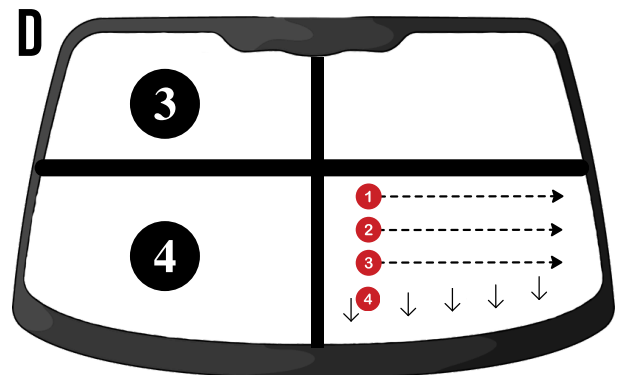

repeat steps for quadrant 3

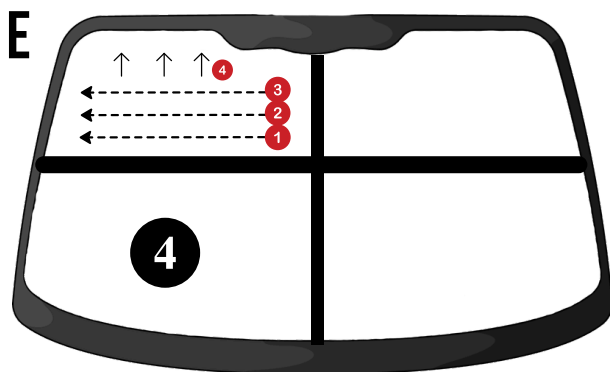


repeat steps for quadrant 4.

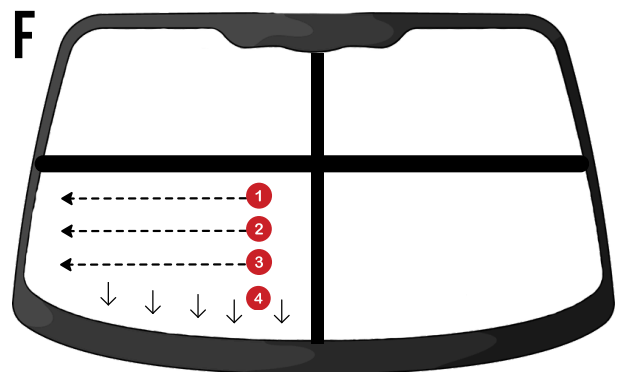

STEP 8: SECOND SQUEEGEE PASS

Once the material is trimmed, spray the entire windshield with the slip solution one final time. Using the squeegee, repeat the entirety of step 7 to remove any remaining moisture and firmly lay down all edges. This step is crucial to ensure there are no moisture pockets trapped beneath the material, as they can affect the clarity and overall quality of your install.

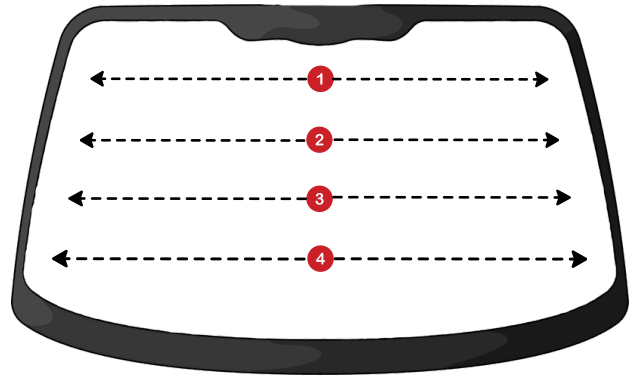

STEP 9: TRIM


**this step is for Universal Kit installations only. Vehicle Specific Kits are pre-cut and do not require any trimming.

Use the provided trimming blade to cut around the edges. We recommend keeping the blade as parallel to the windshield as possible and applying even, steady pressure to avoid damaging the glass. Trim approximately 1/8" away from the edge or gasket to ensure there is no overhang and the material lays securely.



STEP 10: FINAL SQUEEGEE PASS

Once the material is trimmed, spray the entire windshield with the slip solution one final time. Using the squeegee, repeat the entirety of step 7 to remove any remaining moisture and firmly lay down all edges. This step is crucial to ensure there are no moisture pockets trapped beneath the material, as they can affect the clarity and overall quality of your install.

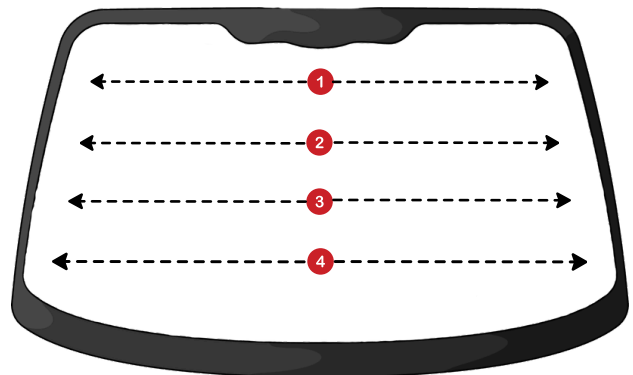

Your installation is now complete! You can drive with confidence knowing your windshield is protected with Windshield Skin®.

Note: A 24-48 hour cure time is required. If weather permits, park the vehicle in direct sunlight to help accelerate the curing process. During this time, avoid washing the vehicle, driving in the rain, or applying any chemicals or coatings to the windshield.

MAINTENANCE TIPS:

Use a Windshield Skin® Maintenance Wipe every 6-8 car washes to resurface the top coat and rehydrate the hydrophobic properties.

Regularly clean the windshield using an ammonia-free glass cleaner and a microfiber cloth.

Clean insects and bird droppings off the windshield regularly to prevent buildup.

Avoid pressure washing directly on the Windshield Skin®.

Do not apply or leave any coatings and/or chemicals on the Windshield Skin®.



**WATCH THE STEP BY STEP
INSTALLATION HERE:**



**DON'T FORGET TO REGISTER
PRODUCT FOR WARRANTY!**



WINDSHIELDSKIN®
WORLD'S #1 WINDSHIELD PROTECTION

www.windshieldskin.com
(916) 913-0051 x202
5145 Golden Foothill Pkwy #180
El Dorado Hills, CA 95762